Andover Automobile Accessories, Co.

Restoration Parts Distributors

Parent company of:
Andover Corvette
Andover Restraints
Andover Automotive
Andover Distributors

Installation Instructions For CR1 Clip On Webbing Retractor



When using non-locking style retractors webbing must be fully extended when in use.

Clip on retractor assemblies can be installed on the outboard side of a non-retractable front or rear lap belt and/or to a non-retractable shoulder harness strap.

Please read instructions completely prior to installation.

Installation Instructions

Hold clip on retractor and rotate the center spring barrel 8 complete turns in the direction of the arrow located on barrel. Take care not to release tension on the center spring barrel at this time.

Position clip on retractor so that the webbing slots at both ends line up with the webbing slot located in center spring barrel.

Retractor should be positioned so that it is in the center of belt when belt is fully extended.

Slide one side of webbing under the three slots on one side of retractor and then bending the webbing slightly slide it under the three slots on the other side.

After webbing has been installed under all slots, release the tension on the center spring barrel and retractor should now wind up the webbing at both ends.

Removal Instructions

Pull both ends of belt assembly apart so that clip on webbing retractor center spring barrel and end webbing slots are exposed and accessible at all points.

Hold center spring barrel so that the tension is not released and then remove webbing from under slots one side at a time until webbing has been completely removed from all slots.

Release tension on center spring barrel. Spring barrel is manufactured in a way that there is little danger of slippage of spring from barrel.