Thunderbird Headquarters




4020 Pike Lane Concord, CA 94520 925-825-9550 Local Orders/Information

800-227-2174 Toll Free Orders

925-689-1771 Local Fax 800-964-1957 Toll Free Fax

1964-66 Body Side Molding Instruction Sheet

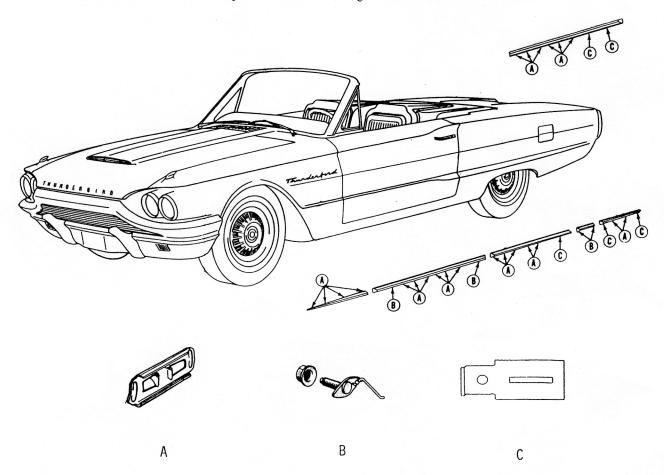

It is recommended that you mark the side of your car with a chalk line. The moldings center over the crease that runs along the side of the car. You will need a drill and drill bits to drill the holes for the clips.